



Sheardy's
A-1 Rental & Concrete
1251 W. Caro Rd (M-81)
Caro, MI 48723

Common Sense Solutions

www.a1rentalonline.com

Cleaning a Air Less Paint Sprayer

989 673 - 6138

1. Turn power OFF.
2. Turn pressure to lowest setting. Trigger gun to relieve pressure.
3. Turn prime valve down (to open position).
4. Remove guard and SwitchTip
5. Clean guard and SwitchTip in flushing fluid (water, paint thinner etc.).
6. Remove siphon tube set from paint and place in flushing fluid. Use warm water and liquid soap for water base paint, and mineral spirits for oil base paint.
7. Turn power ON and primer valve horizontal (to closed position).
8. Hold gun against paint pail. Take trigger safety OFF. Trigger gun and increase pressure until flushing fluid appears.
9. Move gun to flushing pail. hold gun against pail and trigger gun to thoroughly flush system (5 to 10 gallons of water until flushing fluid runs clear -).
10. Turn prime valve down (open Position) and allow flushing fluid to circulate for 1 to 2 minutes to clean drain tube .
11. Wipe, sprayer, hose and gun with a rag soaked in warm water and soap, or mineral spirits.

NOTE :- PAIN T SPRAYER WILL BE CHECKED UPON RETURN ALL PAINT MUST BE REMOVED FROM SPRAYER, HOSES, AND GUN - AND PASS CLEAR FLUID