



Sheardy's  
A-1 Rental & Concrete  
1251 W. Caro Rd (M-81)  
Caro, MI 48723

# Common Sense Solutions

www.a1rentalonline.com

## How to Set up & Leveling a Nifty Lift Aerial Lift

989 673 - 6138

1. Set the Parking brake then unhook lift from the tow vehicle.
2. Crank down dolly wheel for the tong, rough level Lift ( front to back ).
3. Make sure both ( **Red Emergency Stop Buttons** ) are pulled out, ( **both for the Ground Control Panel and the Basket Control Panel** ) then start engine. ( located on the Drivers side of machine. )
4. Place key in **Ground Control Panel**, (Located on the Passenger Side of the machine) , turn the key to ( I ) position.
5. Find the Outrigger Control Panel, press down and hold the power lever on the right side, Then select the appropriate control lever to begin setup, Level legs 1 & 2 First, then proceed to legs 3 & 4,  
( **while watching the frame levels at rear of machine.** )
6. After you have the machine leveled. Turn key to ( o ) position ( **and remove key** ). ( this will keep anyone from messing with the legs ).
7. Go to the Basket and insert the key in the control panel, turn key to ( I ) position, **you now have control in the basket**, and ready to use the lift.  
(NOTE) : - *If ARIAL LIFT does not work, make sure Outriggers have tension with the ground, there are Safety Switches which needs to be activated.*
8. Press the ( **Green Button** ) along with the function lever you wish to use, both the ( **Green Button** ) and **function lever** ), must be press at the same time, for the machine to work.
9. (NOTE : - If upon completion of your work, you try to lift the outriggers and they won't raise up. ( **MAKE SURE that both Lift Arms are completely down** ).

Work or Play

A-1 is the Way