



Sheardy's
A-1 Rental & Concrete
1251 W. Caro Rd (M-81)
Caro, MI 48723

Common Sense Solutions

www.a1rentalonline.com

COTTON CANDY

989 673 - 6138

- **DURING TRANSPORTATION** - the two large knobs located to the left and right of the spinner head **MUST BE HAND TIGHTENED** (clockwise) !!!
- **PRIOR TO OPERATION**- the knobs must be loosened all the way (counterclockwise) !!!!!
- Try **NOT TO USE AN EXTENSION CORD!!!!** If you must use an extension cord, use as short and thick a cord as possible !!!!

INSTRUCTIONS:

1. Make sure switches are all in the **"OFF"** Position. Place metal tub on top of cotton candy machine. Plug machine in. Flip **"MAIN SWITCH"** and **"HEAT SWITCH"** to the **"ON"** position. Let machine run for about five minutes then flip **"MAIN SWITCH"** to **"OFF"** position. This will warm up the machine and prepare it for making candy.
2. Filling machine with floss (a.k.a. sugar)
 - **ALWAYS** fill the machine **WITHOUT** motor running !!!!
 - **ALWAYS** fill to approximately **85% CAPACITY** !!! This is necessary to obtain a balanced condition or vibration will occur.
 - **DO NOT OVERFILL** !!!!
3. Turn machine back on. Floss will start to come out in a few seconds. The unit may smoke as it heats up. To eliminate the smoke, turn the heat control knob counterclockwise in small increments. Once you find the ideal setting for the heat, you should be able to operate near that position each time.

CLEANING:

1. Unplug machine and remove tub from base.
2. **DO NOT USE WATER/CHEMICALS ON THE BASE !!!!** Brush off any loose sugar and we will to the rest !!!!!
3. Rinse tub with warm water only. Machine must be returned clean. There is a **\$ 25.00 CLEANING CHARGE** for machines that have not been cleaned.
4. **FOR TRANSPORTATION** - the two large knobs located to the left and right of the spinner head **MUST BE HAND TIGHTENED** (clockwise) !!!

Work or Play

A-1 is the Way