



Sheardy's
A-1 Rental & Concrete
1251 W. Caro Rd (M-81)
Caro, MI 48723

Common Sense Solutions

www.a1rentalonline.com

How to clean an Electric Roaster Oven

989 673 - 6138

1. Turn temperature control to OFF, Unplug roaster oven from outlet and let cool.
2. Wash cover, rack and insert pan in hot, soapy water. To remove burned-on food, let soak, then scrub with a nylon scouring pad. Rinse in hot water, then dry.
3. Wipe the inside of the roaster base with a damp cloth.
4. Wipe the outside of the roaster oven with a damp, soap cloth; then dry.

NOTE:-

Discoloration of the lid may occur if washed in a dishwasher.

WARNING

- Disconnect power before cleaning
- Do not immerse cord, plug or base in any liquid.

Failure to follow these instructions
can result in death or electrical shock